

XPS 13

DX13260

Setup and Specifications

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

Chapter 1: Get to know your computer.....	4
Chapter 2: Get started with your computer.....	9
Chapter 3: Use the precision touchpad.....	12
Chapter 4: Use the touchscreen display.....	15
Chapter 5: Use keyboard shortcuts.....	17
Chapter 6: Connect external displays.....	19
Turn off the internal display.....	19
Chapter 7: Specifications of XPS 13 DX13260.....	21
Processor.....	21
Chipset.....	21
Memory.....	22
Storage.....	22
GPU—Integrated.....	23
Wireless module.....	23
Internal slots.....	23
External ports and slots.....	24
Display.....	24
Dell low blue light display.....	25
Keyboard.....	25
Touchpad.....	26
Camera.....	26
Audio.....	27
Operating system.....	27
Power adapter.....	28
Power adapter requirements.....	28
Battery.....	29
Power requirements.....	30
Dimensions and weight.....	30
Operating and storage environment.....	30
Aesthetics and build.....	31
Dell support policy.....	32
Chapter 8: Getting help and contacting Dell.....	33
Chapter 9: Revision history.....	34

Get to know your computer

The following views provide an overview of the ports, connectors, and other components available on your computer. For detailed information about each component, see the specifications for your computer.

Left view



Figure 1. Left view of computer

1. **USB 3.2 Gen 2 (10 Gbps) Type-C port:** Provides data transfer speeds of up to 10 Gbps and supports DisplayPort 2.1 and USB PowerDelivery 3.1. It also supports USB-C cable locks.

NOTE: Connect the power adapter to one of the USB-C ports.

NOTE: You can connect multiple devices, including external monitors, through a Dell Docking Station. For more information about Dell Docking Stations, search in the Knowledge Base Resource at the [Dell Support Site](#).

Right view



Figure 2. Right view of computer

1. **USB 3.2 Gen 2 (10 Gbps) Type-C port:** Provides data transfer speeds of up to 10 Gbps and supports DisplayPort 2.1 and USB PowerDelivery 3.1. It also supports USB-C cable locks.

NOTE: Connect the power adapter to one of the USB-C ports.

NOTE: You can connect multiple devices, including external monitors, through a Dell Docking Station. For more information about Dell Docking Stations, search in the Knowledge Base Resource at the [Dell Support Site](#).

Top view



Figure 3. Top view of computer

1. **Dual-array microphones:** Provides digital sound input for audio recording, voice calls, and so on.

2. **Power button**

- Turn on the computer: Press the power button if the computer is off, sleeping, or hibernating.
- Put the computer to sleep: Press the power button while the computer is on.
- Force-shut down: Press and hold the power button for at least 10 seconds.

NOTE: Amber and white LEDs integrated into the power button function as battery-status lights as well as system-diagnostic lights.

3. **Multi-touch precision touchpad:** Multi-touch precision glass touchpad with gesture support.

Front view



Figure 4. Front view of computer

1. **Infrared emitter:** Enables the infrared camera to sense and track motion.
2. **Infrared camera:** Uses facial recognition and enhances security when paired with Windows Hello face authentication.
3. **RGB camera:** Enables you to video chat, capture photos, and record videos.
4. **Camera-status light:** Turns on when the camera is in use.
5. **Ambient-light sensor:** Detects the ambient light and automatically adjusts the brightness of the display, keyboard, and capacitive touch function row.
6. **Infrared emitter:** Enables the infrared camera to sense and track motion.

Bottom view



Figure 5. Bottom view of computer

1. **Speakers:** Provides audio output.
2. **MyDell QR code:** Scan to access MyDell, which is your hub for information that is personalized for your computer.
3. **Service Tag/Express Service Code:** The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information. The Express Service Code is a numeric version of the Service Tag.

Service Tag/Express Service Code location

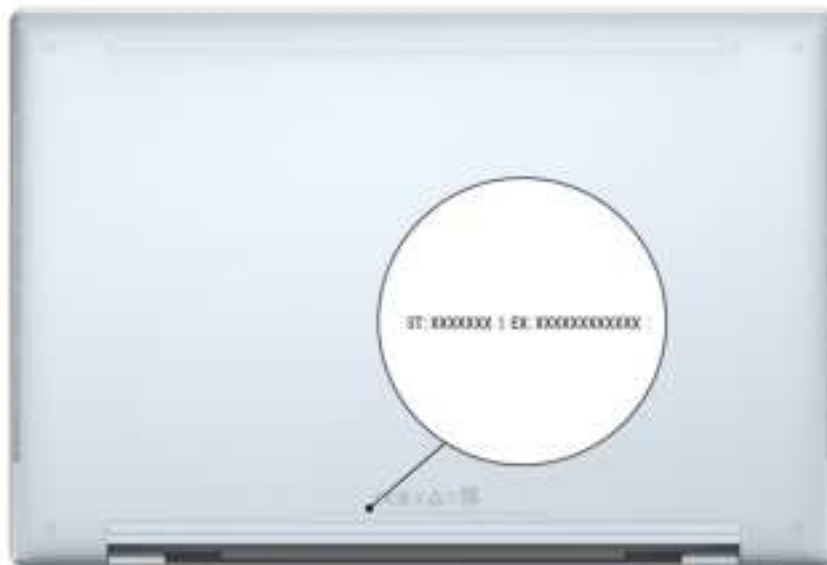


Figure 6. Location of Service Tag/Express Service Code

The Service Tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information. The Express Service Code is a numeric version of the Service Tag.

Get started with your computer

Get started with your computer by connecting it to a power source, completing the operating system setup and accessing Dell apps.

Turn on your computer

Assemble the power adapter and connect it to a power source before connecting it to one of the USB-C ports on the computer. Press the power button to turn on the computer.



Figure 7. Connect the power adapter to the computer and power source, then press the power button to turn it on.

Set up the operating system

1. After you turn on your computer, the operating system welcome screen appears.
2. Select your regional settings, such as language and keyboard layout.
3. Connect to the Internet using Wi-Fi.
4. After connecting to the Internet, follow the on-screen instructions to complete the operating system setup.

Use Dell apps

The following table lists Dell apps available on your computer.

Table 1. Locate and use Dell apps installed on your computer

Dell app	Description
	Dell Optimizer Dell Optimizer is an AI-based software application that allows you to customize your computer settings for power and battery, and more. For more information about configuring and using this app, search for Dell Optimizer at the Dell Support Site .
	Dell SupportAssist SupportAssist keeps your computer running at its best by optimizing settings, detecting issue, and removing viruses. It also notifies when updates are available for your computer. For more information about configuring and using this app, search for SupportAssist at the Dell Support Site .

Battery-status light behavior

The following table describes how the battery-status light (integrated into the power button) behaves in different power states.

Table 2. Battery-status light behavior

Power source	Battery-status light	Power state of computer	Battery-charge level
Connected power adapter or battery	Off	Powered off (S5)	Not applicable
Connected power adapter or battery	Solid-white	Turned on (S0)	6 - 100%
Connected power adapter or battery	Solid-amber	Turned on (S0)	<= 5%

Configuring battery-charge settings in the BIOS Setup menu

Battery-charge settings for your computer can be configured as shown below to suit your usage requirements in the BIOS Setup menu.

NOTE: In addition to battery-charge settings in the BIOS Setup menu, the Dynamic Charge feature in the Dell Optimizer app dynamically applies the best battery charging policy. When your device remains plugged in for extended periods, Dynamic Charge limits charging to 80% to help prevent battery wear and extend the overall lifespan. If you are frequently mobile, ExpressCharge quickly charges the battery using Dell fast-charge technology. The Dynamic Charge feature is enabled by default in Dell Optimizer. For more information, search for the Dell Optimizer User's Guide at the [Dell Support Site](#).

Available battery-charge settings in the BIOS Setup menu:

- **ExpressCharge:** Enabled by default, ExpressCharge quickly charges the battery using Dell fast-charge technology. This setting is recommended for users who need the battery to recharge rapidly. When the computer is powered off, the battery typically charges to 80% within one hour and to 100% within two hours. If the computer is turned on, charging may take longer.
- **Adaptive:** Enables Microsoft Smart Charging, which helps extend battery lifespan by preventing the battery from charging to 100% continuously. When Smart Charging is active, the battery stops charging at around 80% to reduce long-term wear. Smart Charging automatically turns on or off depending on how you use your computer:
 - If your computer remains connected to the power adapter for more than 12 hours, Smart Charging activates, and the battery caps at 80% on the next charge.
 - If the battery drains below 50% while running on battery power, Smart Charging turns off, and the battery charges up to 100% on the next charge.
 - Smart Charging remains permanently on in **Primarily AC Use** mode, keeping the battery at around 80%.
- **Standard:** Fully charges the battery at a moderate rate. This setting provides a balance between charging speed and battery longevity. It is recommended for users who frequently switch between battery power and an external power source.

- **Primarily AC Use:** Extends battery life by lowering the charge threshold so that the battery does not charge to 100%. This setting is recommended for users who primarily operate the computer while plugged into external power.
- **Custom:** Allows you to manually define the battery start and stop charge thresholds.

Changing battery-charge settings in BIOS Setup menu

1. Restart your computer and press F2 immediately to enter **BIOS Setup**.
2. On the menu bar, select **Advanced**.
3. Select one of the following values for the **Battery Charge Configuration** option:
 - **Adaptive**
 - **Standard**
 - **ExpressCharge** (Default)
 - **Primarily AC Use**
 - **Custom**
4. Save the changes and exit the BIOS Setup program.

 **NOTE:** For more information about the BIOS Setup menu, see your computer's Service Manual available at the [Dell Support Site](#).

Use the precision touchpad

The precision touchpad on your computer enables cursor movement and item selection without an external mouse. The following image indicates the active areas of the precision touchpad on your computer:



Figure 8. Active areas of the precision touchpad

1. Left-click area of the precision touchpad

Move your finger on the touchpad within this area to control the cursor. Tap this area to left-click.

2. Right-click area of the precision touchpad

Move your finger on the touchpad within this area to control the cursor. Tap this area to right-click.

The following table lists commonly used touchpad gestures. To enable or disable these gestures or to change touchpad sensitivity, haptic feedback and other touchpad settings, search for **Touchpad settings** in Windows.

Table 3. Commonly used touchpad gestures in Windows

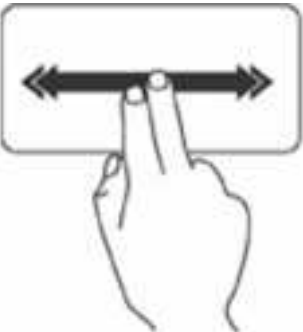
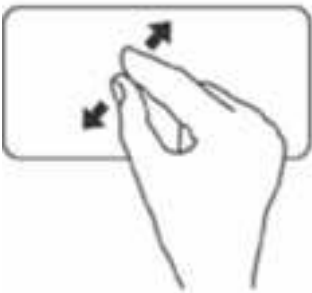
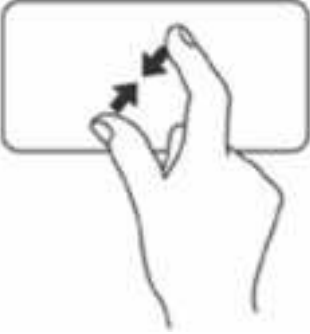
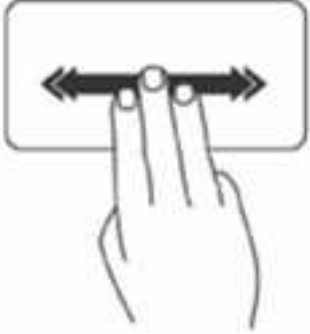
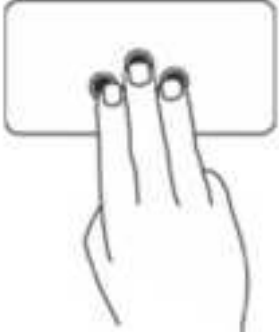
Touchpad gesture	Description
 Figure 9. Two-finger scroll	Swipe two fingers on the touchpad to scroll vertically or horizontally through pages, documents, or lists. The touchpad also supports diagonal scrolling.
 Figure 10. Vertical auto-scroll	Swipe two fingers up or down on the touchpad at a fast pace to start vertical auto-scroll. Tap the touchpad to stop auto-scroll.
 Figure 11. Horizontal auto-scroll	Swipe two fingers that are left or right on the touchpad at a fast pace to start horizontal auto-scroll. Tap the touchpad to stop auto-scroll.
 Figure 12. Zoom in	Place two fingers on the touchpad and then move them apart to zoom in.

Table 3. Commonly used touchpad gestures in Windows (continued)

Touchpad gesture	Description
 Figure 13. Zoom out	Place two fingers on the touchpad and then bring them closer to zoom-out.
 Figure 14. Switch between open apps	Swipe three fingers quickly to the left or right on the touchpad to switch between open applications.
 Figure 15. Launch Windows Search	Tap three fingers on the touchpad to launch Windows Search. NOTE: Use touchpad settings in Windows to customize the application to launch.

For more information about the touchpad gestures available in Windows, search [Microsoft Support Site](#).

Use the touchscreen display

Your XPS 13 DX13260 has a touchscreen display. You can touch the screen to interact with items instead of using a mouse.

The following table lists commonly used touchscreen gestures. Some gestures are application-specific and may not work in all applications.

Table 4. List of commonly used touchscreen gestures

Touchscreen gesture	Description
 Figure 16. Zoom in	Place two fingers on the touchscreen and then move them apart to zoom in.
 Figure 17. Zoom out	Place two fingers on the touchscreen and then bring them closer to zoom out.
 Figure 18. Open context menu	To open the context menu, touch and hold the item on the screen, similar to performing a right-click with a mouse.

Table 4. List of commonly used touchscreen gestures (continued)

Touchscreen gesture	Description
 Figure 19. Scroll	Swipe a finger on the touchscreen to scroll vertically or horizontally through an active page, document, or list.

For more information about the touchscreen gestures available in Windows, search [Microsoft Support Site](#).

Use keyboard shortcuts

NOTE: Keyboard characters may differ depending on the keyboard language configuration of your computer. Keys that are used for shortcuts remain the same across all language configurations.

Standard shortcut keys

Some keys on your keyboard have two symbols on them. These keys can be used to type alternative characters or to perform secondary functions. The symbol that is shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press **shift** and the key, the symbol that is shown on the upper part of the key is typed out. For example, if you press **2**, **2** is typed out; if you press **Shift + 2**, **@** is typed out.

Keys on the function-key row

The top row of the keyboard contains function keys. Pressing the **fn** key toggles between the standard function keys (**F1-F12**) and keys for media control.

NOTE: Pressing the **fn** and **esc** keys together locks the mode of the function-key row (indicated by a lock symbol on the **esc** key). When the computer restarts, the default mode of the function-key row is what was set before the computer was restarted.

Table 5. Media keys available on the function-key row

Media key	Description
	Escape key NOTE: A lock symbol appears when the mode of the function-key row is locked.
	Mute or unmute audio
	Decrease volume
	Increase volume
	Mute or unmute microphone NOTE: A light appears next to the microphone mute icon when the microphone is muted.
	Converts speech to text
	Adjust keyboard backlight brightness
	Decrease brightness of display
	Increase brightness of display
	Project to an external display

Table 5. Media keys available on the function-key row (continued)

Media key	Description
	Takes a screen capture
	Home key
	End key

Other keyboard shortcuts

Table 6. Dedicated keys to launch specific features

Keys	Description
	Launch the Windows Start menu
	Launch Copilot in Windows. NOTE: If Copilot in Windows is not available on your computer, the Copilot key launches Windows Search. For more information about Copilot in Windows, search in the Knowledge Base Resource at Dell Support Site .

The **fn** key is also used with selected keys on the keyboard to invoke other secondary functions.

Table 7. List of keyboard shortcuts invoked with fn key

Keyboard shortcut	Description
fn + Up arrow	Page up
fn + Down arrow	Page down
fn + Left arrow	Home
fn + Right arrow	End
fn + Copilot	Shortcut menu

Connect external displays

Provides an overview of the external displays that can be connected to the computer.

Depending on the connectors available on your external display, you can connect the display to the USB-C ports on your computer using:

- Daisy-chaining technique
- USB-C cables, adapters, or docking stations

NOTE: To experience the full resolution supported by your external displays, use appropriate cables. For example, use DisplayPort cables for 4K and above resolution.

The following table summarizes the number of external displays that can be connected to your computer.

Table 8. External display support

Graphics card	Supported external displays with laptop display enabled	Supported external displays with laptop display disabled
Integrated GPU	2	3

The external display connection method is shown in the following image.

NOTE: When connecting a display indirectly using an adapter or docking station, it is recommended that you connect the display to the docking station first, and then connect the docking station to the USB-C port on your computer.

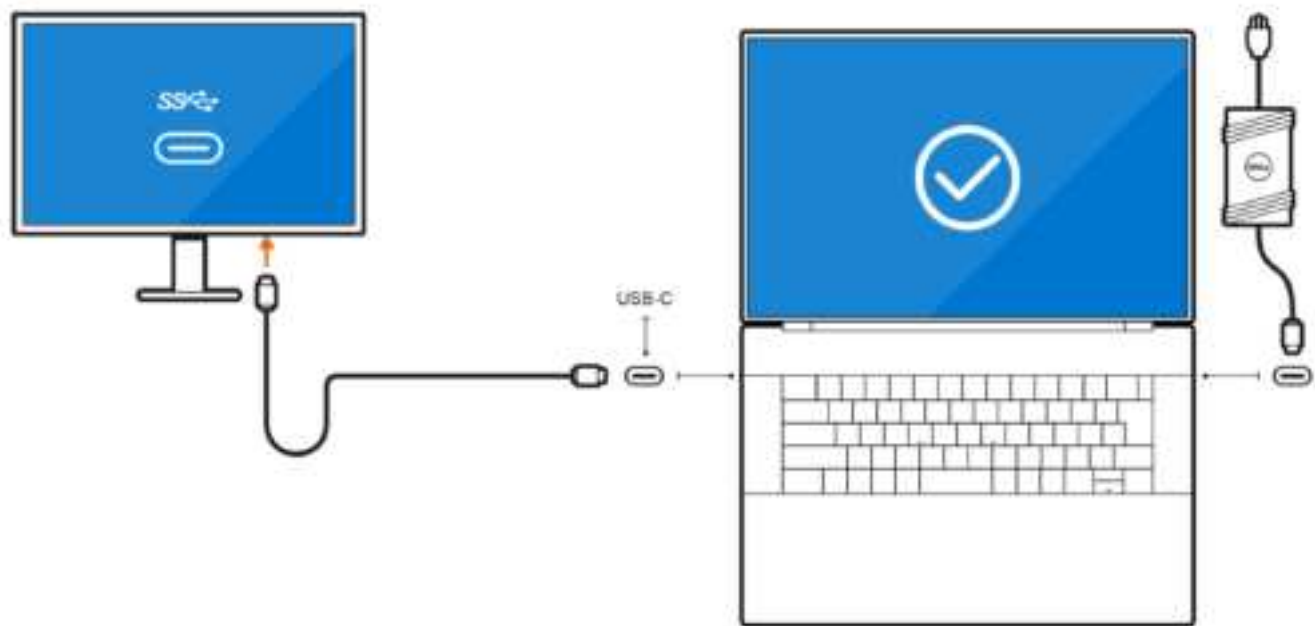


Figure 20. Connecting to external displays

Turn off the internal display

There can be instances where you want to turn off the computer internal display to connect more external displays.

You can turn off the display of your computer by using the Display settings in Windows.

For more information about the steps to turn off the display, search [Microsoft Support Site](#).

Specifications of XPS 13 DX13260

Processor

The following table lists the details of the processors that are supported on your XPS 13 DX13260.

Table 9. Processor

Description	Values
Type	Intel Core 5 320
Wattage	15 W base power consumption 35 W at maximum turbo power
Total core count	6
Number of Performance-cores	2
Number of Efficient-cores	4 low-power efficiency cores
Total thread count	6
Speed	Up to 4.60 GHz
Performance-core frequency	
Base frequency	1.50 GHz
Maximum turbo frequency	4.60 GHz
Efficient-core frequency	
Base frequency	1.40 GHz
Maximum turbo frequency	3.40 GHz
Cache	6 MB
Integrated graphics	Intel Graphics
Neural Processing Units (NPUs)	One NPU, supporting up to 16 TOPs
 NOTE: Tera Operations Per Second (TOPS) is an AI performance metric that measures how many trillions of operations per second an AI processor can perform.	

Chipset

The following table lists the details of the chipset that is supported by your XPS 13 DX13260.

Table 10. Chipset

Description	Values
Chipset	Integrated in the processor
Processor	Intel Core 5 320
DRAM bus width	64 bit

Table 10. Chipset (continued)

Description	Values
Flash EPROM	Not applicable  NOTE: Integrated Flash EPROM not present in CPU
PCIe bus	PCIe 4.0

Memory

The following table lists the memory specifications that are supported by your XPS 13 DX13260.

Table 11. Memory specifications

Description	Values
Memory slots	Single-channel on-board memory  NOTE: The memory is integrated on the system board and is not upgradeable.
Memory type	LPDDR5X
Memory speed	7467 MT/s
Maximum memory configuration	16 GB
Minimum memory configuration	8 GB
Memory size	• 8 GB • 16 GB
Memory configurations supported	• 8 GB LPDDR5X at 7467 MT/s • 16 GB LPDDR5X at 7467 MT/s

Storage

This section lists the storage options on your XPS 13 DX13260.

Your XPS 13 DX13260 supports one M.2 2230 solid-state drive.

Table 12. Storage specifications

Storage type	Interface type	Capacity
M.2 2230 solid-state drive	Gen 4 x4 PCIe NVMe	256 GB
M.2 2230 solid-state drive	Gen 4 x4 PCIe NVMe	512 GB

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your XPS 13 DX13260.

Table 13. GPU—Integrated

Controller	Memory size	Processor
Intel Graphics	Shared system memory	Intel Core 5 320

Wireless module

The following table lists the Wireless Local Area Network (WLAN) module that is supported on your XPS 13 DX13260.

Table 14. Wireless module specifications

Description	Values
Model number	Intel Wi-Fi 7 (BE213)
Transfer rate	Up to 2800 Mbps
Frequency bands supported	2.4 GHz/5 GHz/6 GHz
Wireless standards	• Wi-Fi 802.11a/b/g • Wi-Fi 4 (Wi-Fi 802.11n) • Wi-Fi 5 (Wi-Fi 802.11ac) • Wi-Fi 6/6E (Wi-Fi 802.11ax) • Wi-Fi 7 (Wi-Fi 802.11be)
Encryption	• 802.1X • SAE • GCMP-256 • AES-CCMP • WPA2-Personal/WPA2-Enterprise • WPA3-Personal/WPA3-Enterprise
Bluetooth wireless card  NOTE: The functionality of the Bluetooth wireless card may vary based on the operating system.	Bluetooth 6.0

Internal slots

The following table lists the internal slots of your XPS 13 DX13260.

Table 15. Internal slots

Description	Values
M.2	One M.2 slot for M.2 2230 solid-state drive  NOTE: To learn more about the features of different types of M.2 cards, search Dell Support Site .

External ports and slots

The following table lists the external ports and slots on your XPS 13 DX13260.

Table 16. External ports and slots

Description	Values
USB ports	Two USB 3.2 Gen 2 ports with support for DisplayPort 2.1 and Power Delivery 3.1
Audio port	Two USB 3.2 Gen 2 ports with support for DisplayPort 2.1 and Power Delivery 3.1
Video port(s)	Two USB 3.2 Gen 2 ports with support for DisplayPort 2.1  NOTE: A USB-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.
Media-card reader	None
Power-adaptor port	DC-IN through one of the two USB-C ports
Security-cable slot	Supported through USB-C ports

Display

The following table lists the display specifications of your XPS 13 DX13260.

Table 17. Display specifications

Description	Values
Display type	34cm (13.4"), Touch, Eyesafe, Low blue light
Touch options	Yes
Display-panel technology	White Light Emitting Diode (WLED)
Display-panel dimensions (active area):	
Height	288 mm (11.34 in.)
Width	180 mm (7.09 in.)
Diagonal	339.60 mm (13.37 in.)
Display-panel native resolution	2560 x 1600
Luminance (typical)	500 nits
Megapixels	2.3
Color gamut	DCI-P3 100% Typical , 95% minimum
Pixels Per Inch (PPI)	225
Contrast ratio (minimum)	1600:1
Response time (maximum)	35 ms

Table 17. Display specifications (continued)

Description	Values
Refresh rate	VRR 30 to 120Hz
Horizontal view angle (minimum)	+/- 88 degrees
Vertical view angle (minimum)	+/- 88 degrees
Pixel pitch	0.1125 mm
Power consumption (maximum)	4.17 W
Anti-glare vs glossy finish	Anti-glare

Dell low blue light display

 **WARNING:** Prolonged exposure to blue light from the display may lead to long-term effects such as eye strain, eye fatigue, or damage to the eyes.

Blue light is a color in the light spectrum which has a short wavelength and high energy. Chronic exposure to blue light, particularly from digital sources may disrupt sleep patterns and cause long-term effects such as eye strain, eye fatigue, or damage to the eyes.

The display on this computer is designed to minimize blue light and complies with TÜV Rheinland's requirement for low blue light displays.

Low blue light mode is enabled at the factory, so no further configuration is necessary.

To reduce the risk of eye strain, it is also recommended that you:

- Position the display at a comfortable viewing distance between 20 and 28 inches (50 cm and 70 cm) from your eyes.
- Blink frequently to moisten your eyes, wet your eyes with water, or apply suitable eye drops.
- Look away from your display, and gaze at a distant object at 20 ft (609.60 cm) away for at least 20 seconds during each break.
- Take an extended break for 20 minutes every two hours.

Keyboard

The following table lists the keyboard specifications of your XPS 13 DX13260.

Table 18. Keyboard specifications

Description	Values
Keyboard type	Backlit keyboard with Copilot key  NOTE: The top row of the keyboard can display standard Function buttons or media and display control buttons.
Keyboard layout	QWERTY
Number of keys	• 80 keys (Canada Bilingual [MUI], English International, English US) • 81 keys (English UK, French European, German, Nordic [MUI]) • 82 keys (Portuguese Brazil keyboard) • 84 keys (Japanese)
Key pitch	Horizontal = 19.05 mm key pitch Vertical = 18.05 mm key pitch

Table 18. Keyboard specifications (continued)

Description	Values
Keyboard shortcuts	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. • To type the alternate character, press Shift and the desired key. • To perform secondary functions, press Fn and the desired key. i NOTE: If Copilot in Windows is not available on your computer, pressing the Copilot key launches Windows search. For more information about Copilot in Windows, search Dell Support site. For more information, see Use keyboard shortcuts.

Touchpad

The following table lists the touchpad specifications of your XPS 13 DX13260.

Table 19. Touchpad specifications

Description	Values
Touchpad resolution:	>300 DPI
Touchpad dimensions:	
Horizontal	118.5 mm (4.67 in.)
Vertical	68.5 mm (2.70 in.)

Camera

The following table lists the camera specifications of your XPS 13 DX13260.

Table 20. Camera specifications

Description	Values
Number of cameras	Two
Camera type	FHD MIPI RGB and IR camera
Camera location	Front (Top of bezel)
Camera sensor type	CMOS sensor technology
Camera resolution:	
Still image	2 megapixels
Video	1920 x 1080 at 30 fps
Infrared camera resolution:	
Video	360 x 360 at 15 fps
Diagonal viewing angle:	

Table 20. Camera specifications (continued)

Description	Values
Camera	93.9 degrees
Infrared camera	82.7 degrees

Audio

The following table lists the audio specifications of your XPS 13 DX13260.

Table 21. Audio specifications

Description	Values
Audio controller	Cirrus Logic CS42L43
Stereo conversion	Waves MaxxAudio 13
Internal audio interface	SoundWire interface
External audio interface	Two USB 3.2 Gen 2 ports with support for DisplayPort 2.1
Number of speakers	• Woofers (two channels) • Tweeters (two channels)
Internal-speaker amplifier	Cirrus Logic SmartAmp
External volume controls	Media control keys on function-key row
Speaker output:	
Average	10 W total: • 3 W woofers x 2 channels • 2 W tweeter x 2 channels
Peak	10 W total: • 3 W woofers x 2 channels • 2 W tweeter x 2 channels
Microphone	Dual digital-array microphones

Operating system

Your XPS 13 DX13260 supports the following operating systems:

- Windows 11 Home
- Windows 11 Professional

Power adapter

The following table lists the power adapter specifications of your XPS 13 DX13260.

Table 22. Power-adapter specifications

Description	Option one	Option two
Type	65 W AC adapter, USB Type-C, AC Cable	65 W AC adapter, USB Type-C, 2-pin
Power-adapter dimensions:		
Height	31 mm (1.22 in.)	31 mm (1.22 in.)
Width	41 mm (1.61 in.)	41.5 mm (1.63 in.)
Depth	63 mm (2.48 in.)	48.5 mm (1.91 in.)
Input voltage	100 VAC–240 VAC	100 VAC - 240 VAC
Input frequency	50 Hz–60 Hz	50 Hz–60 Hz
Input current (maximum)	1.70 A	1.70 A
Output current (continuous)	Operating: • 20 V/3.25 A (Continuous) • 15 V/3 A (Continuous) • 9 V/ 3 A (Continuous) • 5 V/3 A (Continuous)	Operating: • 20 V/3.25 A (Continuous) • 15 V/3 A (Continuous) • 9 V/ 3 A (Continuous) • 5 V/3 A (Continuous)
Rated output voltage	• 20 VDC • 15 VDC • 9 VDC • 5 VDC	• 20 VDC • 15 VDC • 9 VDC • 5 VDC
Temperature range:		
Operating	0 °C to 45 °C (32°F to 113°F)	0°C to 45°C (32°F to 113°F)
Storage	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.		

Power adapter requirements

 **NOTE:** If you did not purchase the Dell-branded power adapter that is recommended for your computer, ensure that the power adapter you use meets the following requirements.

The following table lists the power adapter requirements for your XPS 13 DX13260.

Table 23. Power adapter requirements

Description	Value
Power that is required from a power adapter to achieve optimal performance.	65 W
Power that charges the computer at a slower speed.	Less than 55 W

Table 23. Power adapter requirements (continued)

Description	Value
 NOTE: A warning message may appear informing you about the use of a lower-powered adapter and slower charging speed.	
Minimum power that is required from a power adapter to operate the computer and charge the battery.  NOTE: A warning message appears informing you about the use of a lower-powered adapter and slower charging speed.	27 W
USB Power Delivery (PD) fast charging	Supported
ExpressCharge mode	Supported  NOTE: Ensure that the computer with a 52 Wh battery is connected to a 65 W power adapter for this feature to be supported.

Battery

The following table lists the battery specifications of your XPS 13 DX13260.

Table 24. Battery specifications

Description	Values
Battery type	3-cell lithium-ion polymer, 52 Wh, ExpressCharge
Battery voltage	11.70 VDC
Battery weight (maximum)	0.20 kg (0.44 lb)
Battery dimensions:	
Height	4.50 mm (0.18 in.)
Width	236 mm (9.29 in.)
Depth	88 mm (3.46 in.)
Temperature range:	
Operating	- Charge: 0°C to 50°C (32°F to 122°F) - Discharge: 0°C to 60°C (32°F to 149°F)
Storage	-20°C to 65°C (-4°F to 149°F)
Battery operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions
Battery charging time (approximate)  NOTE: You can control the charging time, duration, start and end time, and so on, using the settings on the Dell Optimizer application. For more information about Dell Optimizer application, search Dell Support Site .	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Coin-cell battery	Not supported
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.	

Table 24. Battery specifications (continued)

Description	Values
 CAUTION: Dell Technologies recommends that you charge the battery regularly for optimal power consumption.	

Power requirements

 **NOTE:** The information in this section is applicable to the European Union (EU) countries.



Figure 21. Pictogram for power charging requirements

The power that is delivered by the charger must be between a minimum of 27 Watts that is required by the radio equipment, and a maximum of 65 Watts in order to achieve the maximum charging speed.

Dimensions and weight

The following table lists the height, width, depth, and weight of your XPS 13 DX13260.

Table 25. Dimensions and weight

Description	Values
Front height	12.75 mm (0.50 in.)
Rear height	12.75 mm (0.50 in.)
Width	296.90 mm (11.69 in.)
Depth	200.70 mm (7.90 in.)
Weight  NOTE: The weight of your computer depends on the configuration that you ordered.	1 kg (2.2 lb)

Operating and storage environment

This table lists the operating and storage specifications of your XPS 13 DX13260.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 26. Computer environment

Description	Operating	Storage
Temperature range	0°C to 35°C (32 °F to 95°F)	-40°C to 65°C (-40°F to 149°F)

Table 26. Computer environment (continued)

Description	Operating	Storage
Relative humidity (maximum)	10% to 90% (non-condensing)	5% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	140 G†	160 G†
Altitude range	-15.2 m to 3048 m (-49.87 ft to 10,000 ft)	-15.2 m to 10,668 m (-49.87 ft to 35,000 ft)
⚠ CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.		

* Measured using a random vibration spectrum that simulates the user environment.

† Measured using a 2 ms half-sine pulse.

Aesthetics and build

This section details the color, material, and finish (CMF) specifications of your computer.



Figure 22. Color, Material, and Finish (CMF) of XPS 13 DX13260

Table 27. Color, Material and Finish (CMF) specifications

Component	CMF description
A Cover (Top)	- Aluminum - Sky Dull BB 10+/-3 Gloss Units (GU)

Table 27. Color, Material and Finish (CMF) specifications (continued)

Component	CMF description
B Cover (Display bezel)	• SUS • Dell Standard Black, Matte • Matte 5.5+/-1.5 GU
C Cover (Palmrest)	• Aluminium • Sky Dull BB • 10+/-3 Gloss Units (GU)
D Cover (Bottom)	• Aluminum • Sky Dull BB • 10+/-3 GU

Dell support policy

For information about Dell support policy, search [Dell Support Site](#).

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 28. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	Dell Site
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	Windows Support Site
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals, and documents.	Your Dell computer is uniquely identified using a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at Dell Support Site. For more information about how to find the Service Tag for your computer, see Locate the Service Tag on your computer.
Dell knowledge base articles	1. Go to Dell Support Site. 2. On the menu bar at the top of the Support page, select Support > Support Library. 3. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [Dell Support Site](#).

 **NOTE:** Availability of the services may vary depending on the country or region, and product.

 **NOTE:** If you do not have an active Internet connection, you can find contact information in your purchase invoice, packing slip, bill, or Dell product catalog.

Revision history

Tracks all updates that are made to the document. It typically includes the date of change, version number, and a brief description of the modification. This log helps maintain transparency, accountability, and a clear timeline of progress.

Table 29. Revision history

Revision	Date	Description
A00	June 2026	Original publish date.